



Rubber Insulating Glove Inflation/Inspection Tool

INSTRUCTION FOR USE



Part No. VT-12



1. Slide the inflation tool over the edge of the glove's cuff to trap air inside the rubber insulating glove



2. Roll the Glove over and around the tool to create a tight seal for better inflation and superior visual inspection of your rubber insulating glove



3. Listen, feel and inspect for air escaping due to holes and/or damage to the rubber insulating glove