




## Temporary "V" Cross Arms, Pole Mounted

THE TEMPORARY CROSS ARM IS AN EXCELLENT TOOL FOR CHANGING OUT CROSS ARMS

Solid fiberglass arms for maximum strength. Rated for 34.5KV phase to phase.

- Two piece assembly makes installation easy and fast
- The mounting base includes a ratchet and strap assembly for lightweight and safety. U-Shape design fits over pole top pin.
- Fiberglass arm includes conductor holders with insulators, according to the table below.
- Conductor latches and wire holders are hot stick operable.
- Captive bolts and washers on arm assembly enable the arm to be mounted to the base. No tools are required.
- Load limit is 68kg per side

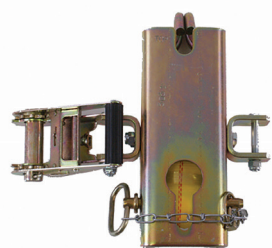

Pole Mounting Bracket  
A30221



Conductor Holder  
(27mm OD)  
A10002



Conductor Holder  
(67mm OD)  
A10039

Part No.	Description	Max Use Ø - Ø (kV)	Length (mm)	Conductor Holders #	Cond Holder Model (With Insulator)	WLL (kg) per side	Max Cond OD (mm)	Wt (kg)
5051	Arm & Mounting Base	35	1625	2	A10002	68	27	12.3
5053	Arm & Mounting Base	35	1625	2	A10039	68	67	12.7
5054	Arm & Mounting Base	35	2195	3	A10002	68	27	15.0
5055	Arm & Mounting Base	35	2195	3	A10039	68	67	15.4
Replacement Parts								
A30220	Arm Only	35	1625	-	-	-	-	10.0
A30233	Arm Only	35	2195	-	-	-	-	11.8
A30221	Mounting Assembly	-	-	-	-	-	-	6.4
5042	Strap Only	-	-	-	-	-	-	0.5
A10002	Conductor Holder & Insulator					68	27	1.36
A10039	Conductor Holder & Insulator					68	67	1.73